



SECURE VAULT—MODEL 33013

KEY OPENING OF THE SECURE VAULT: The Secure Vault is supplied with two keys to open it manually. Do not lock them inside. Put one key in a safe place and use the second key to initially open the door. Note: the key overrides all of the other opening systems and you may use this key to open the Secure Vault at any time. Each key has a code stamped onto its surface. **IMPORTANT** - record this number in case you misplace your keys.

INSTALL BATTERIES: Open the Secure Vault to access the battery holder located in the top of the Secure Vault behind the locking mechanism. Remove the thumbscrews on each end of the battery holder. Install 8 AA alkaline batteries as instructed on the face of the holder. Reinstall the battery holder with the batteries. Be careful not to pinch the wires. You will hear a single audible beep and a green light will flash once the batteries are installed.

FACTORY PRE-SET CODE: The Secure Vault has a pre-set code in place. To open your Secure Vault after you have put in your 8 AA alkaline batteries press the top buttons: 1, 2, 3, 4, 1.

PROGRAMMING: With the door open, find the black programming push button located behind the locking mechanism inside the top of the Secure Vault. With one hand push and press this button. This will result in an audible beep. Keep the button pressed and with the other hand press the top buttons five times in any combinations. Release the button in the vault, then again press and hold it in and re-enter the five combinations. You will hear two beeps and see a flashing green light confirming your personal code.

ENTERING THE WRONG COMBINATION: If five wrong entries are entered, a continuous sound will be heard. To disarm this, wait 30 seconds and then enter your personal five number code.

SECURE MOUNTING OF YOUR SECURE VAULT: The vault housing is supplied with mounting holes in the housing to allow secure mounting of the Secure Vault in a safe place.

9V BATTERY "JUMP START" FEATURE: If the AA batteries in your safe become low, your Secure Vault will warn you. The low battery warning is the red light blinking every 5 seconds. Replace the batteries immediately when you see the red light blinking. The low battery warning period will continue until the batteries expire (up to 7 days). If you then want to enter the safe without using your key, hold a new 9V battery to the battery contacts on the outside of the safe. Be sure to align the battery properly. Align the smaller (+) battery contact with the smaller contact on the safe, and the larger (-) battery contact with the larger contact on the safe. While holding the battery in place, your safe now is powered to be opened using the electronic keypad. Be advised, without power, the safe reverts back to the original default code, and you must enter 1, 2, 3, 4, 1 to open it.

KEY REPLACEMENT: Should you misplace your keys, you may order a replacement by writing to the address below. Your key code number is located on the body of your key and on the key lock face; this number will be required for replacement. Replacement cost is \$3.00 per key.

ADG Sports
2100 N. Hwy 360, Suite 1807
Grand Prairie, TX 75050
www.adgsports.com
972-623-1574