



Operating Instructions

CAUTION: Do not keep the keys in the safe itself.

1. OPENING THE SAFE FOR THE FIRST TIME

To open the safe for the first time, any finger can open the safe (This is the original status for opening the first time)

Press the button 'B' as shown on diagram 2, and the yellow light will be on, put any of your fingers on the fingerprint reader within 10 seconds, you will hear a beep and the green light will be on, the door will be opened automatically.

2. PROGRAMMING THE FINGERPRINT FOR IDENTIFICATION

- A. With the door open, press the green button 'D' on the top of back cover as shown on diagram 3. The yellow light will be on constantly, and the fingerprint reader is waiting for inputing.
- B. Put your finger on the fingerprint reader until you hear a long beep with the the green light on, it means your fingerprint is successfully recorded.
- C. If the inputing is not successful, you will hear 3 beeps with the red light flash 3 times. Do from the step A to B again to input your fingerprint.
- D. The safe can record 255 fingerprints.

Notice:

- ◆ To enhance the identification rate for fingerprint, when you program the fingerprint, it is suggested to program the same finger for 3 times in 3 different angle as shown on diagram 1.
- ◆ When you program the fingerprint, it is suggested to program different two or more fingers in case your finger is injured. Please use more than one fingerprint.

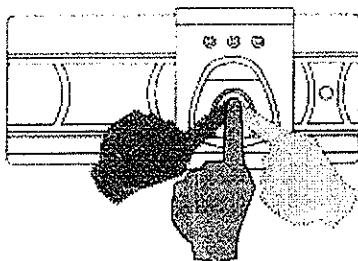


Diagram 1

3. USING THE SAFE

- A. **Closing the safe:** Close the door manually, then Press the button 'B', the door will be locked automatically.
- B. **Opening the safe:** Press the button 'B', and the yellow light will be on, put your finger on the fingerprint reader within 10 seconds, if the input is confirmed you will hear a beep and the green light will be on, the door will be opening automatically (with motorized opening systems).

4. BATTERY REPLACEMENT WARNING

When the red light flashes during using, it means you need change the battery. The safe requires 4 × "AA" size (1.5V) battery. The battery compartment is located on the back of the door. Remove the battery cover and install the battery. Ensure the batteries are fitted with the correct corresponding polarity. Once the battery is installed, close the battery compartment. Use of alkaline batteries is recommended.

5. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system for your safe. If there is any emergency, move the plate A on the front panel as shown on diagram 2, insert the key into the keyhole and turn it in a clockwise direction, this will manually open your safe at any time.

6. DELETING THE FINGER RECORD

With the door open, press the red button 'C' on the top of back cover for three times continuously (interval time between two pressing actions should be within 5 seconds), you will hear a long beep with the green light on, it means all the fingerprint record are deleted successfully which will return to the original status, at this time any finger can open the safe.

7. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are four holes (diameter 8mm).

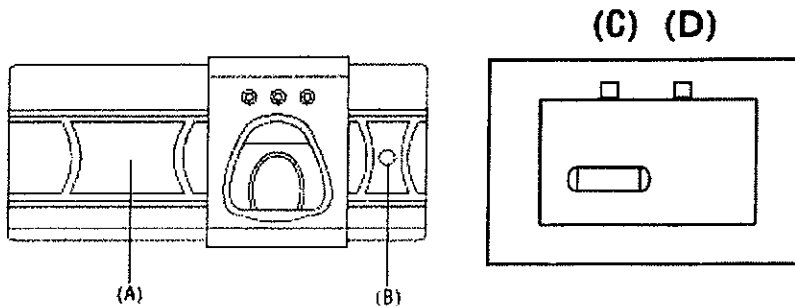


Diagram 2

Diagram 3

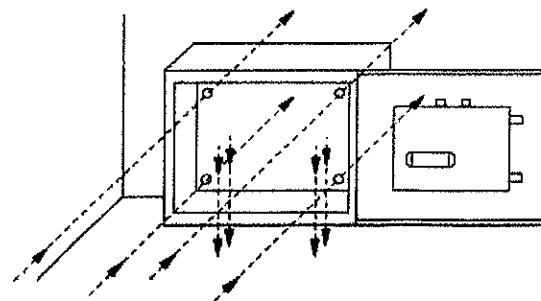


Diagram 4

ADG Sports
1 Boyt Drive
Osceola, Iowa 50213
1.800.550.2698
www.adgsports.com