



**Secure Vault – Select Models  
33081, 33082, 33083**

**NOTICE**

**MOUNTING YOUR SECURE VAULT TO FLOOR OR WALL:** The vault that you have just purchased is designed to be mounted to something sturdy (i.e. shelf, wall, etc.) for proper safety. It is NOT designed to be used as a carrying case. If this case is dropped, it could possibly cause the opening mechanism to trigger. It contains pre-drilled holes for ease of mounting. It is recommended that you use screws to mount the vault from the inside. If you have any questions about proper mounting, please contact our customer service department at 1-800-550-2698.

**OPENING THE SAFE FOR THE FIRST TIME:** To open the safe for the first time, remove the small plastic cover on the front panel, insert the key into the lock and turn it counter-clockwise, at the same time, turn the knob clockwise and open the door.

**INSTALLING BATTERIES:** The safe requires 4 "AA" batteries. Remove the battery cover and install the batteries into the compartment. Make sure the batteries are fitted with the correct corresponding polarity. The display will scan the status of the electronic lock system automatically. If it is in order, the display will show "good".

**OPENING THE SAFE AFTER INSTALLING THE BATTERIES:** To open the door of the safe, press the "START" button, the display on the panel will show "-----", then enter one of the two sets of factory-preset codes: 0, 0, 0, 0 (user code) or 8, 8, 8, 8 (master code) immediately and confirm by pressing the "START" button. You will hear a musical sound with the display showing "OPEN". Open the safe using the knob within approximately four seconds.

**PROGRAMMING THE CODE: Notice: The safe can be programmed with two sets of codes. For your safety, after opening the safe and installing the batteries, you should program two sets of your new codes to take the place of two sets of factory-preset codes.**

**Programming the user code**

- a. With the door of the safe open, press the red button (located on the inside of the door near the hinge) and the display will show "SET CODE".
- b. Now press from 3 to 8 numbers that you wish to use as a new user code, and confirm by pressing the "START" button. After hearing a musical sound, the display will show "IN" and your new numbers. This shows that the new user code is confirmed.

**Programming the master code**

- a. Press the red button then press the "START" button. The display will show "OLD CODE".
- b. Now input the original master code (factory preset code: 8, 8, 8, 8) and press the "START" button. The display will show "SET". Now press from 3 to 8 numbers you wish to use as a new master code, and confirm by pressing the "START" button. The display will show "RE-INPUT".
- c. Now enter you new numbers again and confirm by pressing the "START" button. After hearing a musical sound, the display will show "IN" and your new numbers. This means that the new master code is confirmed.

If you or an intruder used the incorrect group of numbers, you will hear a beep with the display show "ERROR" and it will not open. If the incorrect combination code is used 4 times consecutively, the display will show "ERROR", and the buzzer will sound for approximately 3 minutes. The correct code cannot be entered until after the 3 minute delay. The override key can, however, be used to open the door during the 3 minutes. If the key is used to open the door, the buzzer can be cleared by pressing the red button.

If you do not want the display to show your codes or numbers when you open the safe, just press the "START" button twice at the first time of pressing and the other steps are the same.



**Secure Vault – Select Models  
33080, 33081, 33082**

**BATTERY REPLACEMENT WARNING:** To test the batteries, just press the "START" button. If the batteries are low, the display will show "Lo-BAE", and you should replace the batteries.

**REPLACING THE BATTERIES:** The safe requires 4 size "AA" batteries. Open the safe, remove the battery cover on the back of the door, and replace the old batteries. The use of alkaline batteries is recommended.

**OVERRIDE INSTRUCTIONS TO OPEN THE SAFE:** This safe has a manual override system operated by the keys supplied.

- a. To use the key, remove the small plastic cover on the front panel.
- b. Turn the key counter-clockwise, then turn the knob clockwise and open the door.

**WARRANTY:** Secure Vault safes are protected by a full one-year guarantee that entitles the buyer to free repair if the product failure was caused by a defective part or faulty workmanship. This guarantee lasts for one year from the date of purchase. Claims require an original receipt as proof of purchase and are processed directly through Secure Vault by calling customer service at 1-800-550-2698.

**TROUBLESHOOTING GUIDE:**

Problem	Cause	Solution
Safe beeps constantly.	An incorrect access code has been entered three times in a row and the safe is now in "lock out" mode.	The buzzer will sound for three minutes during which time you can use the manual key to open the safe and press the programming key to reset the safe, see instructions. After the three minutes the buzzer will stop and you can again try to access the safe using your personal five-digit access code.
Key doesn't open vault.	Faulty key.	Write-down the number on your lock and call customer service at 1-800-550-2698.
Keys are locked in your safe.		If there are no batteries in your safe or they are completely dead you can use the 9V "jump feature" to access your safe, see instructions.
		If you do not know your access code and you've locked your keys in your safe call customer service to order a replacement key at 1-800-550-2698. There is a \$10 charge for a replacement key.
Safe will not power up.	Batteries not making proper connections.	Make sure you are using new alkaline batteries and try un-installing and re-installing your batteries. We suggest using Duracell or Energizer brands.
Safe takes more than one series of key entries to open.	Low battery power.	Install new alkaline batteries.
	Code not registering.	Make sure you are firmly pressing the push buttons on your safe and that your using a five-digit code for entry.
Button beep.	Code registration indicator.	Beeps confirm proper key registration.
9V "jump start" feature doesn't work.	Safe has internal power.	The 9V "jump start" feature will NOT work if the internal batteries are charged. This feature only works if there are no internal batteries or the internal batteries are completely dead.
		Make sure you are using a new 9V alkaline battery and that the contacts are lined up correctly, see instructions. We suggest using Duracell or Energizer brands.

**Secure Vault**  
 One Boyt Drive  
 Osceola, Iowa 50213  
 www.adgsports.com  
 1-800-550-2698